Please read the instructions along with the walkie talkies carefully before use, so that you can operate them conveniently.

Congratulations on your purchase of the Walkie Talkies! To get the most out of your Walkie talkies please read this manual as it will help you explain to the child the safe a proper way to use this toy.

SAFETY TIPS:

- · Use this only as intended.
- To prevent fire or shock hazard, do not expose this unit to rain or moisture.
- · Do not submerge the unit in any liquid
- · Do not disassemble

Battery Information:

Information: Requires 2 X 9Volt (6LR61) batteries (not included).

Warning

Replacement of batteries must be done by an adult.

Do not mix old and new batteries.

Do not mix the alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.

The supply terminals are not to be short-circuited. Non-rechargeable batteries are not to be recharged.

Exhausted batteries are to be removed.

Only batteries of the equivalent type are to be used. Batteries are to be inserted with the correct polarity.

Dispose of batteries properly.

Do not dispose of batteries in fire; batteries may explode or leak.

Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision


Battery Operation :

Remove the screw on the battery door with a screw driver.

Open the battery door.

Insert 2 X 9Volt (6LR61) batteries with correct polarity into the battery compartment. Close the battery door, and replace the screw on position.

Using Your Walkie Talkies:

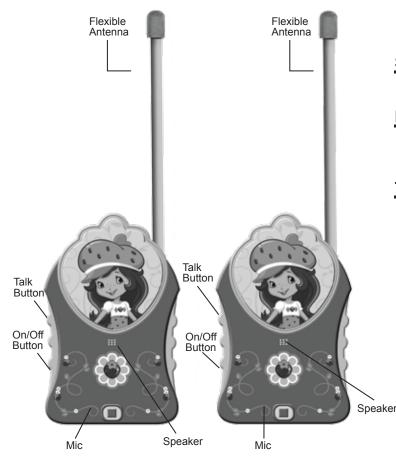

Battery Information:



Turning Power On/Off:

Slide **On/Off Button** to activate or deactivate the Walkie Talkies. Remember to switch Walkie Talkies **OFF** after use to conserve battery life.

Both Walkie Talkies must be turned **ON** in order to send and receive messages.

Sending Voice Messages:

Press and hold the Talk Button and speak into speaker.

Receiving Voice Messages:

Messages can not be received while the **Talk Button** is pressed. Messages are heard through the speaker

Troubleshooting:

Be careful not to talk at the same time as your friend. Two people talking at once will affect performance of the units.

This product does not transmit well through obstacles such as buildings, metal structures and trees.

Replace Batteries If:

One or more of the Walkie Talkies do not work Signal range decreases notably

Need More Help?

Do Not Return Item to Store.

Call 1-800-370-1827 and speak to a customer service representative.

ITEM # 13310 - Strawberry Shortcake Walkie Talkie



