

Congratulations on your purchase of the Star Wars Spyware Bounty Hunter Watch. To get the most out of your Watch, please read this manual as it will explain how to properly and safely operate this product.

Safety Tips

- Use this only as intended
- To prevent fire or shock hazard, do not expose this unit to rain or moisture
- Do not submerge the unit in any liquid
- Do not disassemble

WARNING

All of the packaging such as tape, plastic sheets, wire ties, stickers, and tags are not part of this toy and should be discarded for your child's safety. Retain package for future reference as it contains important information.

Conforms to toy safety standards HR4040 (CPSIA) and ASTM F963

Battery Information

Requires 1 x 3.0V CR2032 battery (included)

BATTERY WARNING

- Replacement of batteries must be done by an adult
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) batteries or rechargeable (nickel-cadmium) batteries
- non-rechargeable batteries are not to be recharged
- rechargeable batteries are only to be charged under adult supervision
- rechargeable batteries are to be removed from the toy before being charged
- different types of batteries or new and used batteries are not to be mixed
- batteries are to be inserted with the correct polarity
- exhausted batteries are to be removed from the toy
- the supply terminals are not to be short-circuited
- Instructions for replacement of batteries

Please retain the information for future reference.

IMPORTANT:

Please save this instruction sheet.
It contains valuable product information.

How It Works

HOW TO ENTER STOPWATCH, ALARM SETTING, & TIME SETTING MODE

In normal time mode, press <K2> button:

- (1). Press the 1st time, enter STOPWATCH mode
- (2). Press a second time, enter ALARM setting mode
- (3). Press a 3rd time, enter TIME setting mode
- (4). Press a 4th time and the watch will return to Normal time mode

HOW TO USE THE STOPWATCH

Press <K2> (1 time) to enter the STOPWATCH mode, press <K1> button:

- (1). Press <K1> to start / stop the timer
- (2). Press <K3> to reset to zero while stopped
- (3). Press <K2>, quit STOPWATCH and return to Normal time mode

HOW TO SET THE ALARM

Press <K2> (2 times) to enter the ALARM mode, at the beginning, HOUR will flash.

- (1). Press <K3> to cycle through the HOURS and MINUTES
- (2). Press <K1> to cycle and increase the flashing number (HOUR: "0 ~ 12" in 12-hour mode and "0 ~ 23" in 24-hour mode; MINUTE: "00 ~ 59")
- (3). Press <K2>, quit the ALARM setting mode and return to normal time mode
- (4). In normal time mode, press <K1> + <K3> to toggle alarm on and off (the icon appears / disappears)

HOW TO SET TIME, DATE, MONTH, YEAR & 12/24 HOUR TIME

Press <K2> (3 times) to enter the TIME setting mode, SECONDS will flash.

- (1). Press <K3> to cycle through SECONDS, MINUTES, HOURS, DATE, MONTH and YEAR.
- (2). Press <K1> to cycle and advance the flashing item. To select 12-hour or 24-hour mode while setting the HOUR (The letter "A" or "P" will appear beside the MINUTES when the 12-hour mode is selected. "H" will appear when the 24-hour mode is selected. When in 12-hour mode, AM or PM will appear in normal time mode).
- (3). Press <K2>, This quits the TIME setting mode and returns to normal time mode.
- (4). When the alarm reaches its set time, the buzzer will produce "di-di" sound for 1 minute. Pressing <K1>, <K2>, <K3> or <K4> at any time, will stop the alarm sound.

Need More Help? Do Not Return Item to Store.

Call 1-800-370-1827 and speak to a customer service representative.

BATTERY OPERATION:

Your Bounty Hunter Watch come with one CR2032 battery already installed. Over time or after extended use, the battery may need to be replaced. Replacing the battery is simple, but should be done by an adult or parent.

Turn the product over and locate the screws on the bottom of the watch. Remove the screws with a small phillips screwdriver, and remove the panel to expose battery. Remove old battery.

Insert 1 x (CR2032) Battery (included) with correct polarity into the battery compartment. Replace the bottom panel and the screws. Unit is now ready for use again.

Specifications

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Electronic Parameters:

Operating voltage: 3.0V (CR2032)

Operating current: 30 mA

Battery life (estimate): 80 cycles

(Motion switch works 5 minutes as one cycle)

Power: 0.1W

Output power: < 0.5W

Operating frequency range: 32KHz ~ 500KHz

HOW TO SET MOTION ALARM

- (1). Place the watch around your door handle or any place you want to detect motion.
- (2). Press <K4> and hold for 2 seconds to enter motion alarm mode. A red LED will begin to flash. Press <K4> to toggle alarm on and off.
- (3). When the motion switch is triggered within 5 minutes, the red LED will light for 5 seconds and the alarm buzzer will produce "di di di di" sound. Simultaneously, (pressing <K1>, <K2> or <K3> can stop the sound at any time). Afterward, the red LED will begin to flash. Each time the motion switch is triggered, the timer will go to reset and the motion switch can work in 5 minutes again.
- (4). If the motion switch is not triggered in 5 minutes, press <K4> and hold for 2 seconds. Watch will enter sleep mode, the motion switch will be turned off automatically and the red LED will stop flashing, you must press <K4> again to enter the MOTION alarm mode.

