



**jazwares™**

**MP3/4**

**USER GUIDE**

© Jazwares, Inc. 2009

# CONTENTS

Please read the instructions along with the player carefully before you use it, so that you can operate it conveniently.

WELCOME & Safety Tips	3
Key Control & Interface	4-5
Main Menu	6
Music Function	7
Video Function / Voice Record Function	8
Play Recording / Photo	9
Ebook / Loading your MP3/4	10
System Settings	11
Video Conversion Software / Troubleshooting	12
Notes	13
Warranty	14-15

## Included in box:

- Preloaded MP3/4 Player
- Earphones
- USB Cable
- Video Conversion Software CD
- User Guide and Warranty

Congratulations on your purchase of the Ben 10 Preloaded MP3/4 Player! We hope you enjoy all the great features on the player. To get the most out of your Ben 10 Preloaded MP3/4 Player please read this manual as it provides tips and information about its various features.

## **SAFETY TIPS:**

---

- Use this only as intended.
- To prevent fire or shock hazard, do not expose this unit to rain or moisture.
- Do not submerge the unit in any liquid
- Do not disassemble
- Do not touch the USB connection port of the player, as it may become damaged.
- Avoid using headphones/earphones at high volume. Hearing experts advise against continuous loud and extended music play. Keep the volume at a moderate level. The quieter the sound, the longer you can listen to it safely.



### **NOTE : For Home and Personal Use**

This product is intended to be used for recording and playback for your home & enjoyment. Copying & commercial use of copyrighted material without permission of the copyright owner may be prohibited by law. Use of your media player, in compliance with all copyright and applicable intellectual property laws, remains the responsibility of the user of the product.

# Key Control and Interface:

The buttons have different functions for press and press hold.

## PRESS FUNCTIONS

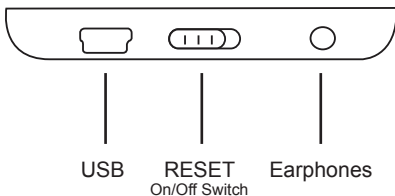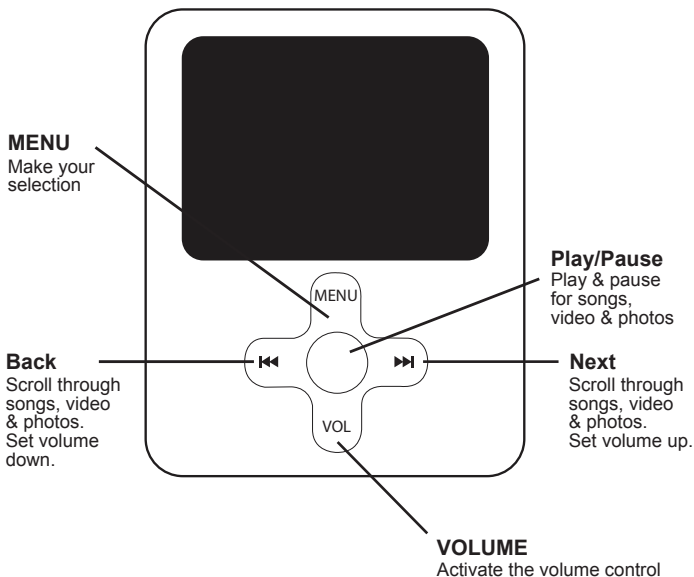

# Key Control and Interface:

The buttons have different functions for press and press hold.


## PRESS & HOLD FUNCTIONS

### MENU

Press and hold to go back to Menu options

### Rewind

Press and hold to rewind a song or video.

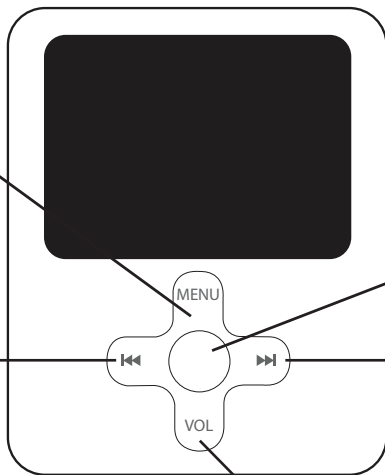

### On/Off

Press and hold to turn player on and off

### Fast Forward

Press and hold to fast forward through a song or video.

### VOLUME

Activate the volume control

## WARNING!

Please use the delete feature carefully.  
Any files deleted from the player will be gone forever.

# Main Menu:

Your Player contains seven submenus.  
Each menu corresponds to a function in the player.



**MUSIC:**  
To play music



**PHOTOS:**  
To store photos



**VIDEO:**  
To play video



**EBOOK:**  
To store and read text



**VOICE RECORD:**  
To record from microphone



**SYSTEM:**  
To change system settings



**PLAY RECORDING:**  
To listen to recording

Press **⏪** or **⏩** to scroll to the desired function.

Press **MENU** to confirm the selection.

Press and hold the **MENU** button to return to the main menu from any mode.

# Music Function:

Choose **MUSIC** option and press the **MENU** button to confirm your selection.

- Press center button to play and pause music track.

## Changing Music Tracks:

- ▶▶ to play next music track. Press & hold to fast forward within current song.
- ◀◀ to play previous music track. Press & hold to rewind within current song.

## Adjust Volume:

Press **VOL** to activate the volume control.

- ▶▶ to increase volume
- ◀◀ to decrease volume
- Press center button to return to track screen, once you have chosen your desired volume.  
If you do not press any button, the volume control will be dismissed after several seconds.

## Lyrics:

Press & hold **MENU** to view song lyrics.  
Press **MENU** to turn off song lyrics.

**EQ Setup:** (This offers you several sound frequency ranges such as rock, pop, jazz & more.)

While track is playing, press **MENU** to show sub-menus.  
Press ▶▶ to scroll to Equalizer  
Press **MENU** to confirm selection  
Choose your desired equalizer mode by pressing ▶▶  
to scroll and press **MENU** to confirm selection.

## Repeat Mode:

While track is playing, press **MENU** to show sub-menus.  
Press ▶▶ to scroll to Repeat  
Press **MENU** to confirm selection ▶▶  
Choose your desired repeat mode by pressing  
to scroll and press **MENU** to confirm selection.

## Video Function:

---

Choose **VIDEO** option and press the **MENU** button to confirm your selection.

- Press center button to play and pause video track.

### Changing Video Tracks:

▶▶ to play next video track. Press & hold to fast forward within current video.

◀◀ to play previous video track. Press & hold to rewind within current video.

### Adjust Volume:

- Press center button 2 times

Press **VOL** to activate the volume control.

▶▶ to increase volume

◀◀ to decrease volume

- Press center button to return to track screen, once you have chosen your desired volume.

If you do not press any button, the volume control will be dismissed after several seconds.

## Voice Record Function:

---

Choose **VOICE RECORD** option and press the **MENU** button to confirm your selection.

- Press center button to **START** recording.
- Press center button to **PAUSE** recording.
- Press and hold center button to **SAVE** recording.

Before starting to record, press **MENU** to enter the sub-menu and select your desired recording type.

### NOTE :

There is a maximum of 99 recordings in any folder.



## Play Recording:

---

Choose **PLAY RECORDING** option and press the **MENU** button to confirm your selection.

- Press center button to play & pause recording.  
Press **MENU** to enter sub-menu. Sub-menu includes options to select folders and delete.

## Changing Recording:

- ▶▶ to play next recording. Press & hold to fast forward within recording.
- ◀◀ to play previous recording. Press & hold to rewind within recording.

## Adjust Volume:

- Press center button to pause recording.  
Press **VOL** to activate the volume control
- ▶▶ to increase volume
- ◀◀ to decrease volume
- Press center button to return to recording, once you have chosen your desired volume.  
If you do not press any button, the volume control will be dismissed after several seconds.

## Photo:

---

Choose **PHOTO** option and press the **MENU** button to confirm your selection.

- Press center button to view selected photo

## Changing Photo:

- ▶▶ to view next photo. Press & hold to fast forward photos in the set.
- ◀◀ to view previous photo. Press & hold to rewind photos in the set.

## Ebook Function:

---

Choose **EBOOK** option and press the **MENU** button to confirm your selection.

- Press center button to view text.

### Changing Text Files:

- ▶▶ to view next text file. Press & hold to fast forward within current text.
- ◀◀ to view previous text file. Press & hold to rewind within current text.

## Loading Music, Video, Photos, Text:

---

Turn your MP3/4 Player on.

Plug your player into your PC with the included USB cable

A hard drive icon will appear on your computer's "My Computer" window.

*NOTE : Your player can not be used when it is connected to your computer to charge.*

Double click on this icon; it will open up as a new window. You can copy and delete files just as you would with files on a hard drive or floppy disk.

*Please go to page 12 to learn about the included VIDEO CONVERSION SOFTWARE.*

### Ejecting your player

When you are finished copying files to the player, "Eject" it from your computer. First close all the windows that belong to your player. Click the icon on the bottom right corner of the windows desktop & safely detach your player from USB cable.

#### **NOTE :**

If you do not properly eject the player from your computer before disconnecting, you may corrupt files on the player.



# System Settings:

---

Choose **SYSTEM** option and press the **MENU** button to confirm your selection.

## System Menu:

▶▶ to scroll down

◀◀ to scroll up

Press **MENU** to confirm your desired selection from the system menu

**CLOCK:** (This allows you to save the date and time of a recording.)

Set system Date and Time

Press **VOL** to move from date & time boxes.

Press ▶▶ or ◀◀ to change the numbers in date & time.

## LCD Set:

Allows you to set the length of time the player screen goes black. Choose from 0 - 30. When the player is at 30, it will go black very quickly. When the player is at 0, it will stay on longer.

## Language:

Allows you to set the menu to a different language.

## Power Off:

Allows you to set the length of time the player stays on, before shutting off to save battery. Choose from 0 - 60. When the player is at 60, it will shut off very quickly. When the player is at 0, it will stay on longer.

## Replay Mode:

Allows you to set repeat modes.

## Memory Info:

Displays storage available and total capacity of player's storage.

## Firmware Version:

Displays version number & date of the firmware.

## Firmware Upgrade:

This feature allows you to upgrade the firmware of the player. This should only be used the instruction of a customer service representative.

# Conversion Software CD:


Convert Video Files into AMV Files

User can convert video files into AMV files using the supplied conversion software.

1. Run the supplied program **SETUP MP3 PLAYER UTILITIES 4.16**.

2. Open the AMV Conversion software you just installed

3. When the conversion is finished, the system will automatically play the converted AMV video files.

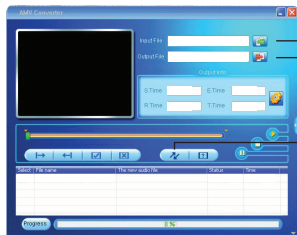

Select the video you are converting  
Select the location for the video (your MP4)

Press to begin the conversion

The conversion software CD includes a Media Manager to help create playlists.

## Troubleshooting:

<b>NO POWER</b>	Check whether batteries are installed properly. Please make sure your player is charged.
<b>NO SOUND IN EARPHONE</b>	Check earphone connection. Please make sure earphone is clean. Make sure your MP3/4 file is not damaged.
<b>STRANGE CODE IN DISPLAY</b>	Please make sure you have selected the proper language.
<b>CAN'T DOWNLOAD MUSIC PROPERLY</b>	Check USB cable connection. Check whether USB cable is damaged. Check installation of drive program. Check whether there is free memory space.

**Need More Help?**

**Do Not Return Item to Store.**

Call **1-800-370-1827** and speak to a customer service representative.

## NOTES:

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by switching the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experience radio/TV technician for help.

# Limited Ninety (90) Day Warranty:

## WARRANTY COVERAGE

Jazwares, Inc.'s warranty obligation is limited to the terms set forth below.

## WHO IS COVERED

Jazwares, Inc. warrants the product to the original purchaser or the person receiving the product as a gift against defects in material & workmanship as based on the date of the original purchase from an authorized dealer or retailer. The original sales receipt showing the product name & the purchase date from an authorized retailer is considered such proof.

## WHO IS COVERED

Jazwares, Inc. warranty covers new products if a mechanical defect arises & a valid claim is received within the Ninety (90) Day Warranty Period. At its option, Jazwares, Inc. will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts & is at least functionally equivalent or most comparable to the original product in Jazwares, Inc.'s inventory, or (3) refund the original purchase price of the product.

Jazwares, Inc. warrants replacement products or parts provided under this warranty against defects in materials & workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Jazwares, Inc. property. If a refund is granted, your product becomes Jazwares, Inc. property.

**Replacement product or refund can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.**

## WHAT IS NOT COVERED - EXCLUSIONS & LIMITATIONS

The limited warranty applies only to the products manufactured by or for Jazwares, Inc. that can be identified by the trademark, trade name, or logo affixed to it. This limited warranty does not apply to any non Jazwares, Inc. hardware product or any software, even if packaged or sold with the product. Non Jazwares, Inc. manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product. Jazwares, Inc. is not liable for any damage to or loss of any programs, data or other information stored on any media contained within the product, or any non - Jazwares, Inc. product or part not covered by this warranty.

# Limited Ninety (90) Day Warranty:

## WHAT IS NOT COVERED - EXCLUSIONS & LIMITATIONS

This warranty does not apply

- (a) to damage caused by accident, abuse, misuse, misapplication, or non - Jazwares, Inc. product,
- (b) to damage caused by service performed by anyone other than Jazwares, Inc.
- (c) to a product or a part that has been modified without the written permission of Jazwares, Inc.

## LIMITED WARRANTY DOES NOT COVER

- Shipping charges to return defective product to Jazwares, Inc.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, accident, unauthorized repair or other cause not within the control of Jazwares, Inc.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage occurring to product during shipping.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured approved and/or authorized, or repair of products damaged by these modifications.
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

## RMA REQUIREMENT

If Jazwares, Inc.'s Customer Service verifies that the product is defective, the Return Authorization Department will issue an RMA number to be placed on the outer package of the product. Jazwares, Inc. can not accept any product that does not include an RMA number on the package.

BEFORE RETURNING ANY PRODUCT, CONTACT JAZWARES, INC. CUSTOMER SERVICE. Customer service is available 9-6 EST at 1-800-370-1877.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. JAZWARES, INC. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you

This warranty gives you specific legal rights. You may have other rights which vary from state to state.

# Features & Specifications:

---

## FEATURES:

1.8" Full Color TFT LCD Display  
Slim Compact Design  
Music, Video, Photos & Text  
Plays up to 500 Songs\*  
ID3 Support : Title, Lyrics & Play  
USB 2.0 Full Speed

## SPECIFICATIONS:

Display : 1.8" Full Color TFT LCD Display, 160 x 128  
Memory : 2 GB Flash  
Video Format: WMV, ASF, AMV  
Video Conversion Software Included  
Audio Format: MP1, MP2, MP3, WMA, WAV  
Picture Format: JPG, BMP, GIF  
Preset Equalizer Modes : Rock, Pop, Classic and More!  
Voice Record Function  
Multi-languages  
Plug & Play : Windows XP® / Windows Media®  
Rechargeable Lithium Battery

\*Song capacity is dependent upon the size of each song file. 500 songs is based upon the assumption that each song file will be 3.8 Mega Bytes

Other brand names mentioned herein are for identification purposes only and may be trademarks of their respective holder(s).

## MP3/4