



72016

MICROPHONE USER GUIDE



Congratulations of your purchase of this Microphone!

Please read all information in this manual thoroughly before use to ensure safe, convenient operation.


Included in box:

- User Guide
- Microphone

INSTRUCTIONS


Operation

Remove "try-me" pull tab from battery compartment on back of unit to gain full functionality of microphone. Turn the microphone switch to "ON" and press Plex button to hear songs and phrases and activate flashing lights.

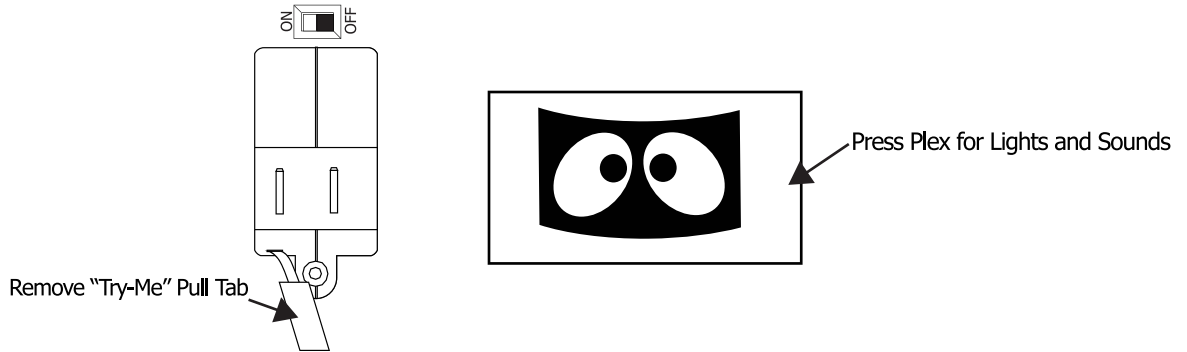

To Replace Batteries:

Locate battery compartment and "ON/OFF" switch on the back of the microphone. Ensure microphone switch is set to the "OFF" position. Using a screwdriver, unscrew the battery door compartment and insert batteries, following correct polarity and adhering to the battery warnings below. The microphone requires 2 x AAA batteries (included). Close the battery door and replace the screw in position.

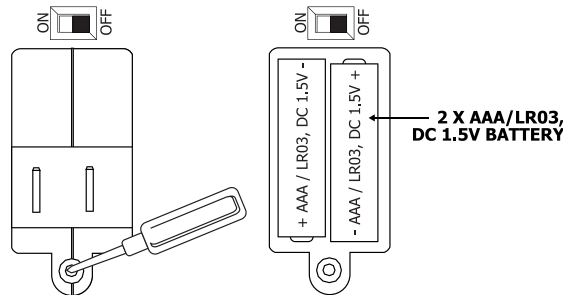

MICROPHONE BATTERY COMPARTMENT

Troubleshooting

- Make sure microphone is turned on and active.
- Wait for singing or phrases to stop before pressing Plex button again.
- If sounds begin to become distorted, replace batteries.

SAFETY INFORMATION

Warning! Not suitable for children under 36 months. This product contains small parts which may be a choking hazard.



- Batteries are to be replaced by and adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- For best performance only the recommended batteries or their equivalent are to be used.
- Batteries must be inserted with correct polarity.
- Do not mix new and used batteries.
- Do not mix different types of batteries.
- The supply terminals are not to be short-circuited.
- This product is not recommended for use on loose dirt or wet surfaces.
- Do not immerse in water. Sponge clean only.



FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

BEFORE RETURNING ANY PRODUCT, CONTACT JAZWARES, INC. CUSTOMER SERVICE.

Customer service is available 9-6 EST at 1-800-370-1877.

Jazwares Inc.

1067 Shotgun Road

Sunrise, FL 33326

www.jazwares.com

MADE IN CHINA

© Jazwares, Inc. 2012

IMPORTANT:
Please save this instruction sheet.
It contains valuable product information.