



jazwares™

Alarm Clock Radio

USER GUIDE

© Jazwares, Inc. 2011

CONTENTS

Please read the instructions along with the alarm clock carefully before you use it, so that you can operate it conveniently.

WELCOME, Safety Tips & Battery Info	3-4
Alarm Clock Controls & Functions	5-6
Using Your Alarm Clock	7-9
Notes	10
Warranty	11-12
Technical Specifications	13

Included in box:

- Alarm Clock
- AC Adaptor
- User Guide and Warranty

Congratulations on your purchase of the WWE Alarm Clock Radio!
We hope you enjoy all the great features of the clock. To get the most out of your Alarm Clock please read this manual as it provides tips and information about its various features.

SAFETY TIPS:

- Use this only as intended.
- To prevent fire or shock hazard, do not expose this unit to rain or moisture.
- Do not submerge the unit in any liquid
- Do not disassemble

Power Supply:

The WWE Alarm Clock uses an AC Adapter.

This is included in the packaging. You will also need 3 AA batteries as a backup for your Alarm Clock Radio. The unit will also work on batteries alone.

Warning:

Replacement of batteries must be done by an adult.

Do not mix old and new batteries.

Do not mix the alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.

The supply terminals are not to be short-circuited.

Non-rechargeable batteries are not to be recharged.

Exhausted batteries are to be removed.

Only batteries of the equivalent type are to be used.

Batteries are to be inserted with the correct polarity.

Dispose of batteries properly.

Do not dispose of batteries in fire ; batteries may explode or leak.

Only use the adapter provided by the manufacturer.

Battery Operation :

Remove the screw on the battery door with a screw driver.

 
Open the battery door.

Insert 3 AA batteries with correct polarity into the battery compartment.

Close the battery door, and replace the screw on position.


Battery Information:

Requires 3 AA (included).

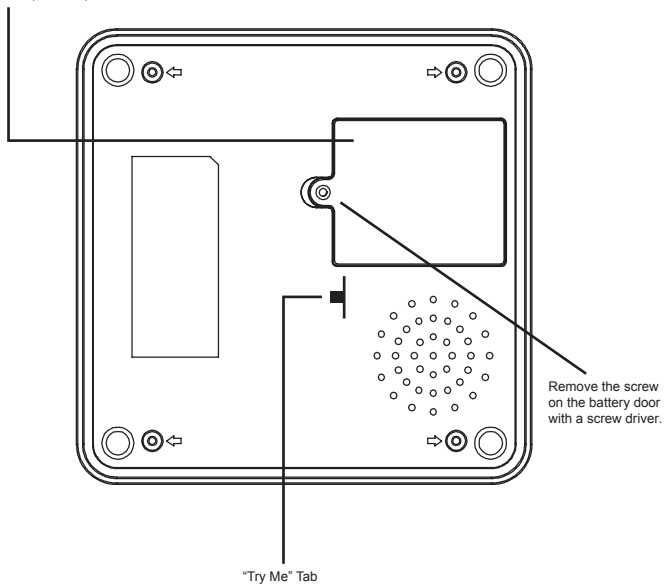

Before you can use the WWE Alarm Clock Radio, you will need to change it from "Try Me" mode. There is a tab labeled "Remove Before Use" on the bottom of the radio. Pull the tab and your clock radio will be ready to use!

 Alarm Clock Controls:

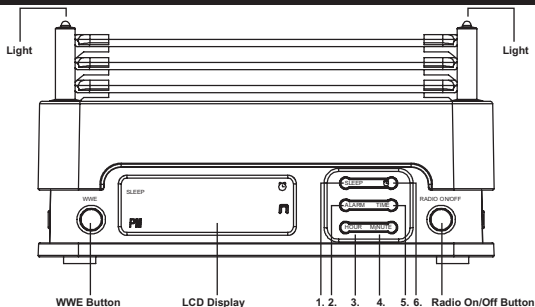

WWE Button : Use this button to select the WWE sound you would like to wake up to or preview the WWE voices and bell sound.

LCD Display : Shows what radio station you are listening to or the time of day. Also shows AM/FM, Alarm On, Sleep, Snooze or the WWE voice mode when they are in use.

1. Sleep Button : Use this button to play your radio for a set amount of time.

2. Alarm Button : Use this button to set the time for your alarm

 
3. Hour Button : Use this button with the Time Set or Alarm Set buttons to change the time on your clock or alarm.

4. Minute Button: Use this button with the Time Set or Alarm Set buttons to change the time on your clock or alarm.

5. Time Button : Use this button to set the time on your Alarm Clock Radio.

6. On/Off Button : Use this button to turn your alarm on and off.

Radio On/Off Button : Use this button to turn your radio on and off.

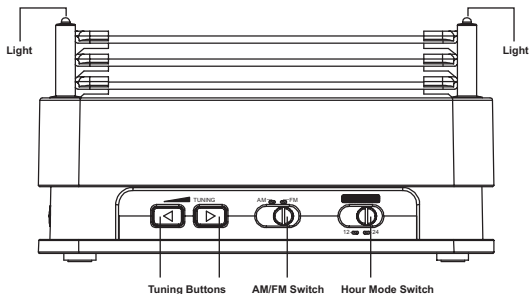


Tuning Buttons : Use these buttons to tune your radio to the station or frequency you want to listen to.

AM/FM Switch : Use this switch to change the frequency from AM to FM band.

Hour Mode Switch : Use this switch to set your display to 12 hour time or 24 hour time.

 
Alarm Clock Controls (cont.):

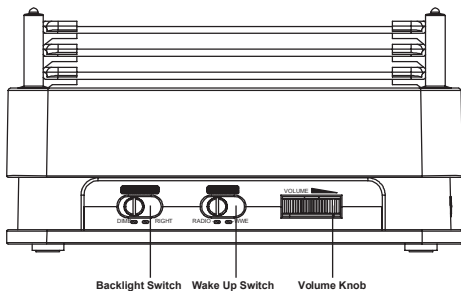

Backlight Switch : Use this switch to adjust the backlight on the LCD Display to Dim or Bright.

Wake Up Switch : Use this switch to control whether your alarm is the radio or a WWE sound.

 Volume Knob : Turn this knob to adjust the volume level of the radio.

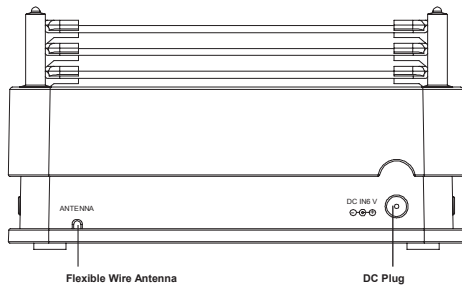

Flexible Wire Antenna : Uncurl this wire to improve the reception when listening to the radio. This is located at the bottom of the radio

DC Plug : Plug your AC adapter in here to plug your player into the wall.

Setting The Time:

Before you turn your Alarm Clock Radio on, use the HOUR MODE to choose whether you want your Alarm Clock Radio to display the time in 12 hour, or 24 hour intervals.

Note : This can only be set before the Alarm Clock Radio is turned on

if you have set the Alarm Clock Radio to 12 or 24 hour format and want to switch the format, you must unplug the Alarm Clock Radio and remove the batteries for 5 minutes before making the switch, otherwise it will stay on the original setting.

TO SET THE TIME :

1. Press and hold the TIME BUTTON to enter TIME SETTING MODE.
2. While still holding the TIME BUTTON down, press and hold the HOUR and MINUTE BUTTONS until the correct time is shown on the LCD DISPLAY.

Note : AM and PM will appear on the display screen if the 12 hour display format is used.



3. Release the TIME BUTTON and the Alarm Clock Radio will return to NORMAL TIME MODE, showing the time you have set on the LCD DISPLAY

Setting The Alarm Time:

Press and hold the ALARM BUTTON to enter ALARM SETTING MODE.

While still holding the ALARM BUTTON down, press and hold the HOUR and MINUTE BUTTONS until you see the time you want on your LCD DISPLAY.

Release the TIME BUTTON and the Alarm Clock Radio will return to NORMAL TIME MODE.

Once you have set the alarm time, press the  button to engage alarm.  will appear on the LCD DISPLAY, showing the alarm is on.

To Wake Up To The Radio:

Follow the steps to set the alarm time. After setting the alarm time, press the RADIO ON/OFF BUTTON to turn the radio on and use the VOLUME and TUNING knobs to find the station you want to wake up to and the volume level you want.

Move the WAKE UP switch to RADIO. The radio will play the station you have chosen at the volume you have set when the alarm goes off.

To Wake Up To A WWE Sound:

Follow the steps to set the alarm time.

Use the WWE BUTTON to select which WWE sound you would like to wake up to. You can choose from a specific WWE character voice, the ring bell, or random mode. Random mode plays a randomly selected WWE character voice.

The LCD DISPLAY will show you what sounds you are listening to:
1-4 are character voices

 is the ring bell


 is random mode


Once you have chosen the sound you want to wake up to, move the WAKE UP switch to WWE. The Alarm Clock will play the sound you have selected when the alarm goes off. The lights will also turn on.

To Snooze Your Alarm:

Push Down (or smack down) the wrestling ring to snooze your alarm for 5 minutes. When the unit is pushed down, the light will also turn on.

To Turn The Alarm Off:

While the alarm is on, press the  button one time to stop the alarm until the next day, then press it again to turn the alarm off completely.

 will disappear when you turn the alarm off completely.

To Listen To The Radio:

Press the RADIO ON/OFF BUTTON to start listening!

You can use the TUNING buttons on the side of your Alarm Clock Radio and the AM/FM Band switch to find the station or frequency you want to listen to. You can see what frequency or station the Alarm Clock Radio is tuned to on the LCD DISPLAY.

NOTE : If you are having trouble tuning in to the station you want to hear, move the Flexible Wire Antenna around the Alarm Clock Radio.

Using The Sleep Function:

The Sleep Function lets you listen to music for a certain amount of time, after which the Alarm Clock Radio will automatically turn off.

To start the Sleep Function, press the SLEEP BUTTON. Press and release the SLEEP BUTTON to choose the amount of time you want the Alarm Clock Radio to play : 90, 60, 30 or 10 minutes. You can also choose OFF to turn the Sleep Function off.

Need More Help?

Do Not Return Item to Store.

Call **1-800-370-1827** and speak to a customer service representative.

NOTES:



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by switching the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

AC ADAPTER WARNING :

Unplug the AC adapter or power cord before cleaning the product.

Use a dry cloth to clean the product to insure the safe operation of the product.

Examine the AC adapter or power cord before every use to check for damage to the cord, plug, enclosure and other parts, and in the event of such damage, the AC adapter must not be used until the damage has been repaired.

Do not connect more than the recommended number of power supplies.

Limited Ninety (90) Day Warranty:

WARRANTY COVERAGE

Jazwares, Inc.'s warranty obligation is limited to the terms set forth below.

WHO IS COVERED

Jazwares, Inc. warrants the product to the original purchaser or the person receiving the product as a gift against defects in material & workmanship as based on the date of the original purchase from an authorized dealer or retailer. The original sales receipt showing the product name & the purchase date from an authorized retailer is considered such proof.

WHO IS COVERED

Jazwares, Inc. warranty covers new products if a mechanical defect arises & a valid claim is received within the Ninety (90) Day Warranty Period. At its option, Jazwares, Inc. will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts & is at least functionally equivalent or most comparable to the original product in Jazwares, Inc.'s inventory.

Jazwares, Inc. warrants replacement products or parts provided under this warranty against defects in materials & workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Jazwares, Inc. property.

**Replacement product can only be sent if all warranty requirements are met.
Failure to follow all requirements can result in delay.**

WHAT IS NOT COVERED - EXCLUSIONS & LIMITATIONS

The limited warranty applies only to the products manufactured by or for Jazwares, Inc. that can be identified by the trademark, trade name, or logo affixed to it. This limited warranty does not apply to any non Jazwares, Inc. hardware product or any software, even if packaged or sold with the product. Non Jazwares, Inc. manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product. Jazwares, Inc. is not liable for any damage to or loss of any programs, data or other information stored on any media contained within the product, or any non - Jazwares, Inc. product or part not covered by this warranty.

Limited Ninety (90) Day Warranty:

WHAT IS NOT COVERED - EXCLUSIONS & LIMITATIONS

This warranty does not apply

- (a) to damage caused by accident, abuse, misuse, misapplication, or non - Jazwares, Inc. product,
- (b) to damage caused by service performed by anyone other than Jazwares, Inc.
- (c) to a product or a part that has been modified without the written permission of Jazwares, Inc.

LIMITED WARRANTY DOES NOT COVER

- Shipping charges to return defective product to Jazwares, Inc.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, accident, unauthorized repair or other cause not within the control of Jazwares, Inc.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage occurring to product during shipping.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured approved and/or authorized, or repair of products damaged by these modifications.
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

BEFORE RETURNING ANY PRODUCT, CONTACT JAZWARES, INC. CUSTOMER SERVICE.
Customer service is available 9-6 EST at 1-800-370-1877.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. JAZWARES, INC. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you

This warranty gives you specific legal rights. You may have other rights which vary from state to state. This warranty is only valid in the Unites States of America.

© Jazwares, Inc.

Technical Specifications:

Frequency Range :

AM 530 - 1710 KHz
FM 88 - 108 MHz

Speaker Impedance:

8 OHMS 0.5W

Power Source :

External AC/DC Adaptor :
AC 120V ~ 60Hz, 2W
Battery :
DC 4.5V (R6, UM-3, AA size x 3)

Alarm Clock Radio

Jazwares Inc.
1067 Shotgun Road
Sunrise, FL 33326

USER GUIDE

© Jazwares, Inc. 2011

