



jazwares™

Projection Alarm Clock

USER GUIDE

© Jazwares, Inc. 2012

CONTENTS

Please read the instructions along with the Alarm Clock carefully before you use it, so that you can operate it conveniently.

WELCOME, Warnings & Safety	3-4
Knowing Your Alarm Clock	5
Using Your Alarm Clock	6-7
Notes	8
Warranty	9-10
Features & Specifications	11

 
Included in box:

- Alarm Clock with AC Cord
- User Guide and Warranty

Congratulations on your purchase of the Alarm Clock!
We hope you enjoy all the great features. To get the most out of your Alarm Clock please read this manual as it provides tips and information about its various features.

WARNINGS:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Dangerous high voltages are present inside the enclosure. Do not open the cabinet refer servicing to qualified personnel only.

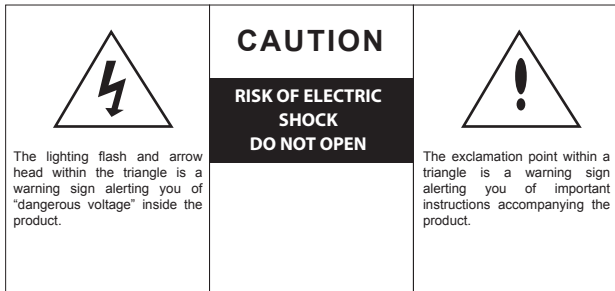

The Caution marking is located at the bottom of the unit.

CAUTION:

PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT, KEEP THESE INSTRUCTIONS. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit does not contain any parts that can be repaired by the user.

DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

WARNING:

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or re-chargeable (nickel-cadmium) batteries.

 
 
Important Safety Instructions:

1. Read these instructions.
2. Keep these instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defect the safety purpose of the polarized or grounding type plug.
A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have been fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Knowing Your Alarm Clock:

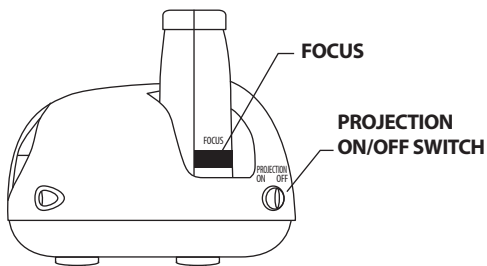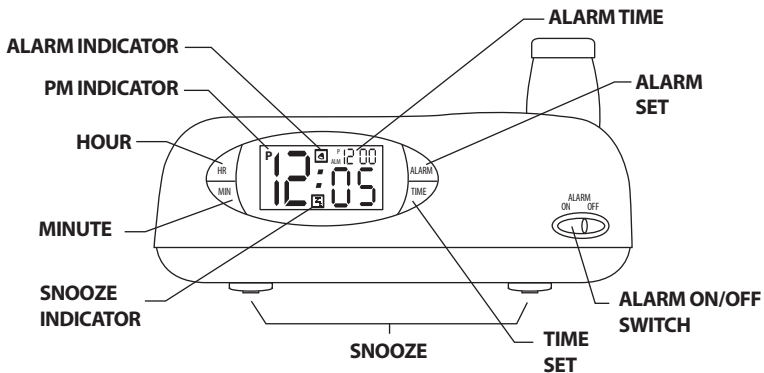

Using Your Alarm Clock:

POWER SUPPLY

Begin by plugging in the power cord into a standard household outlet.

ATTENTION

1. Do not plug or unplug the power cable while you have wet hands.
2. When planning not to use this unit for a long time, disconnect the power cable from the wall outlet.
3. When disconnecting the power cord from the wall outlet, do not pull on the cord in order to avoid shock risks caused by damaged cable.

SETTING THE TIME

1. Press and hold the **TIME** button down to activate time setting.
2. While holding down the **TIME** button, press the **HOUR** button to advance to the correct hour. The **PM indicator** will light when the hour is advanced into the PM time.
3. While holding down the **TIME** button, press the **MINUTE** button to advance to the correct minute.
4. Release the **TIME** button when the correct time is shown on the display.

Be careful setting the time. The PM indicator P will appear in the upper left corner of the display when time is past 11:59 AM.

SETTING THE ALARM

1. Press and hold the **ALARM** button down to activate alarm setting.
2. While holding down the **ALARM** button, press the **HOUR** button to advance to the correct hour. The **PM INDICATOR** will light when the hour is advanced into the PM time.
3. While holding down the **ALARM** button, press the **MINUTE** button to advance to the correct minute.
4. Release the **ALARM** button when the correct alarm time is shown on the display.

Be careful setting the time of the alarm. The PM INDICATOR P will appear next to the ALARM time when time is past 11:59 AM.

Using Your Alarm Clock:

ACTIVATING THE ALARM

1. Slide the **ALARM ON/OFF** switch to the ON position. On the front of the clock the **ALARM INDICATOR** will be displayed.
2. Slide the **ALARM ON/OFF** switch to the OFF position to deactivate the alarm. The **ALARM INDICATOR** will disappear.

SNOOZE

1. To use the snooze function press down the whole unit to activate the SNOOZE. The alarm will stop for 4-5 minutes and then sound again.
2. To stop the snooze function, slide the **ALARM ON/ OFF** switch to the OFF position.

USING PROJECTION CLOCK

You can project the time onto the ceiling, wall or any white surface you like.

1. Slide the **PROJECTION ON/OFF SWITCH** to the ON position and simply adjust the FOCUS until you have a clear projected time image.
2. To shut off the projection time, slide the **PROJECTION ON/OFF SWITCH** to OFF position.

BATTERY BACK UP

You can use the back up battery feature for when the power is interrupted, the battery will hold the time and alarm settings until the power is restored.

Insert one 1.5 volt "AAA" battery in the base of the clock to provide power for the battery back up function.

Need More Help?

Do Not Return Item to Store.

Call **1-800-370-1827** and speak to a customer service representative.

NOTES:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by switching the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experience radio/TV technician for help.

Limited Ninety (90) Day Warranty:

WARRANTY COVERAGE

Jazwares, Inc.'s warranty obligation is limited to the terms set forth below.

WHO IS COVERED

Jazwares, Inc. warrants the product to the original purchaser or the person receiving the product as a gift against defects in material & workmanship as based on the date of the original purchase from an authorized dealer or retailer. The original sales receipt showing the product name & the purchase date from an authorized retailer is considered such proof.

WHO IS COVERED

Jazwares, Inc. warranty covers new products if a mechanical defect arises & a valid claim is received within the Ninety (90) Day Warranty Period. At its option, Jazwares, Inc. will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts & is at least functionally equivalent or most comparable to the original product in Jazwares, Inc.'s inventory, or (3) refund the original purchase price of the product.

Jazwares, Inc. warrants replacement products or parts provided under this warranty against defects in materials & workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Jazwares, Inc. property. If a refund is granted, your product becomes Jazwares, Inc. property.

**Replacement product can only be sent if all warranty requirements are met.
Failure to follow all requirements can result in delay.**

WHAT IS NOT COVERED - EXCLUSIONS & LIMITATIONS

The limited warranty applies only to the products manufactured by or for Jazwares, Inc. that can be identified by the trademark, trade name, or logo affixed to it. This limited warranty does not apply to any non Jazwares, Inc. hardware product or any software, even if packaged or sold with the product. Non Jazwares, Inc. manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product. Jazwares, Inc. is not liable for any damage to or loss of any programs, data or other information stored on any media contained within the product, or any non - Jazwares, Inc. product or part not covered by this warranty.

Limited Ninety (90) Day Warranty:

WHAT IS NOT COVERED - EXCLUSIONS & LIMITATIONS

This warranty does not apply

- (a) to damage caused by accident, abuse, misuse, misapplication, or non - Jazwares, Inc. product,
- (b) to damage caused by service performed by anyone other than Jazwares, Inc.
- (c) to a product or a part that has been modified without the written permission of Jazwares, Inc.

LIMITED WARRANTY DOES NOT COVER

- Shipping charges to return defective product to Jazwares, Inc.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, accident, unauthorized repair or other cause not within the control of Jazwares, Inc.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage occurring to product during shipping.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured approved and/or authorized, or repair of products damaged by these modifications.
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

BEFORE RETURNING ANY PRODUCT, CONTACT JAZWARES, INC. CUSTOMER SERVICE. Customer service is available 9-6 EST at 1-800-370-1877.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. JAZWARES, INC. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you

This warranty gives you specific legal rights. You may have other rights which vary from state to state. This warranty is only valid in the United States of America.

© Jazwares, Inc.

Features & Specifications:

- Constantly illuminated colored time display
- Large LCD display with hour, minute & alarm time
- Repeating snooze alarm-Snooze
- Easy to set time and alarm controls
- Projection on-off control and Projection Focus
- Optional battery back-up (Requires one 1.5-volt “AAA” battery)

Power Supply	AC 120V/60HZ
--------------	--------------

Item 14520, Item 16103

Projection Alarm Clock